 


Government Disaster Response Radio System Household Radio Receiver User Manual [1/4]

Background Information


Component Names and Functions

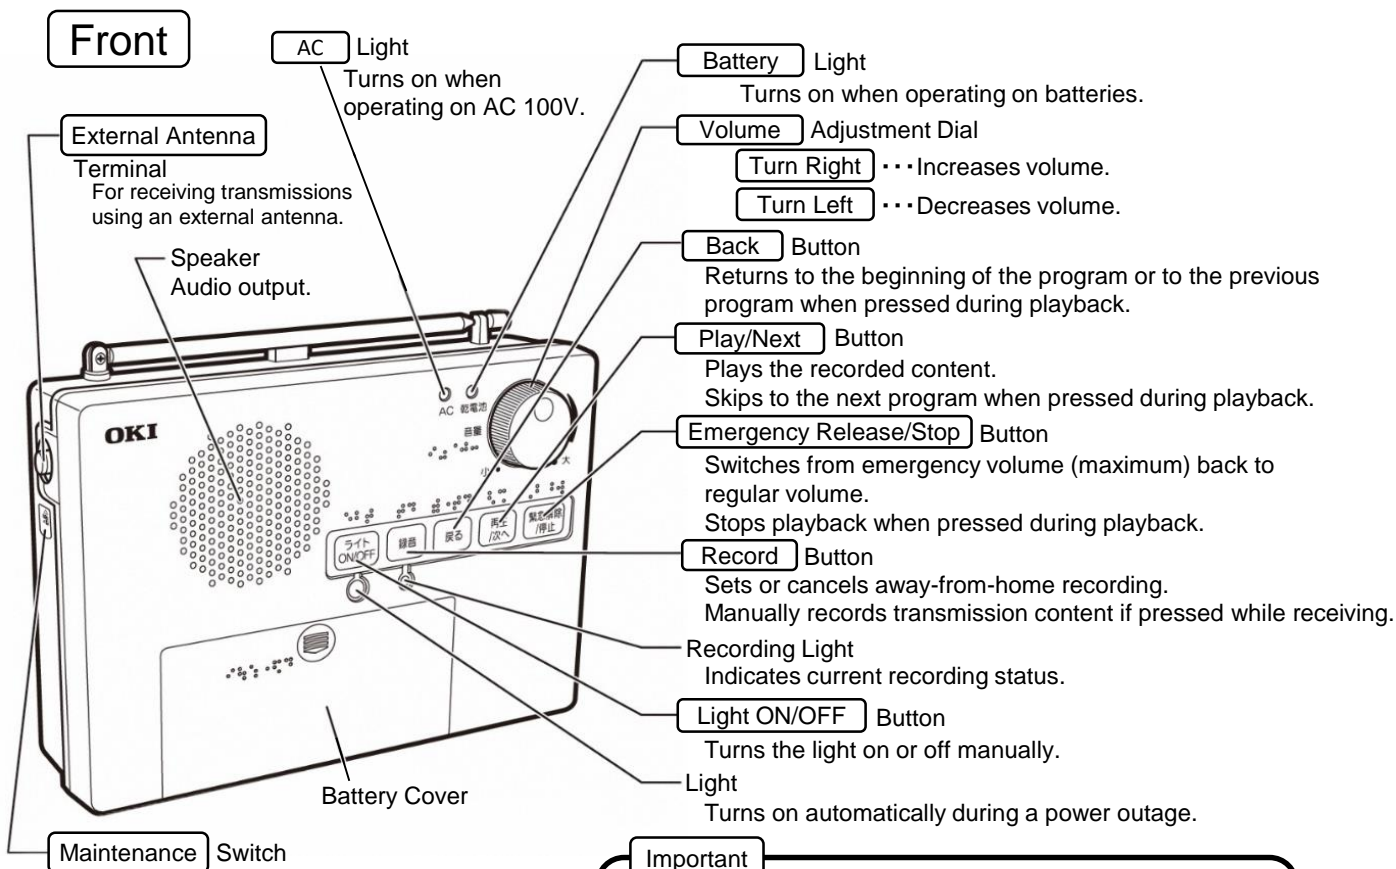

Important

During an emergency, the volume is set to maximum and the light flashes.
If the volume is too loud, press the [Emergency Release/Stop] button. The volume will return to the normal level.

Back

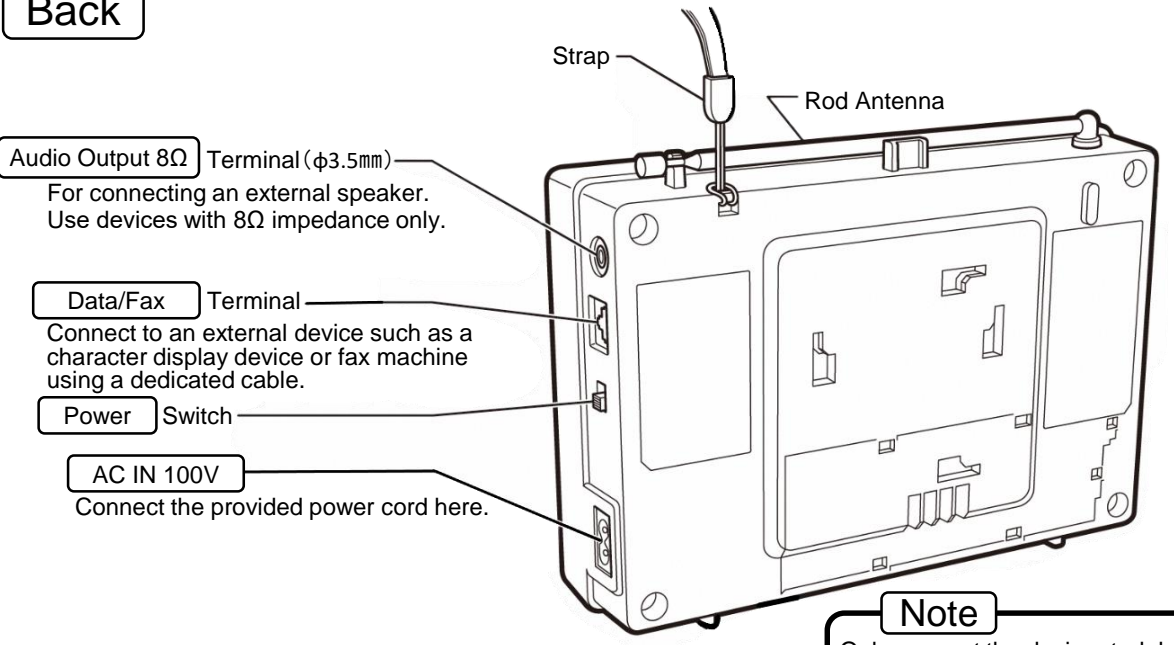

Note


Only connect the designated devices to the data/fax terminal.

* Indicates labels on the device.

Government Disaster Response Radio System Household Radio Receiver User Manual [2/4]

Background Information

Light Functions

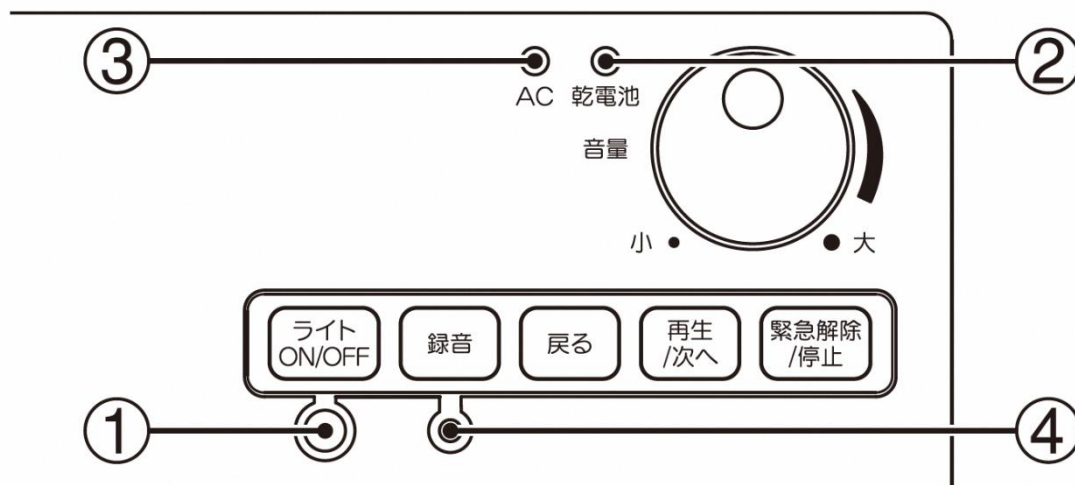

| Name | Color | Turns On | Flashes |
|------------|--------|---|--|
| ①Light | White | <ul style="list-style-type: none"> When Light ON/OFF is pressed When the power source changes to battery during a power outage¹ | When receiving an emergency broadcast |
| ②Battery | Red | When operating on batteries | When the batteries are dead or no batteries are inserted ² |
| ③AC | Green | When operating at AC 100V | <ul style="list-style-type: none"> When receiving an audio transmission When a fax or data has been received³ |
| ④Recording | Orange | When recording | When an unplayed transmission has been recorded |
| | Green | When away-from-home recording is set | <u>When away-from-home recording is set and an unplayed transmission has been recorded⁴</u> |
| | Red | During maintenance | When recording is not possible ⁵ |

Notes

¹Remains on for a fixed period of time when the power switches from AC to battery, such as when there is a power outage or the power cord is unplugged.

²It may take some time for the battery light to change.

³Flashes three times at the beginning.

⁴Flashes green and orange alternately.

⁵When the recording light flashes red, the device memory may be defective. Contact the distributor or service company.

Government Disaster Response Radio System Household Radio Receiver User Manual 【3/4】

1. Introduction ~ Before Use ~

【1】 Open the battery cover and insert two D-sized batteries (C and AA batteries can also be used).

※The power will automatically switch to battery during a power outage or when the power cord is removed. Insert batteries so that you do not miss an emergency broadcast.

※Replace the batteries once a year.

※Use alkaline batteries only (other batteries cannot be used).



(1) Push down strongly on the arrow mark in the center.



(2) Pull the cover down while continuing to press the arrow mark.



(3) Insert batteries and follow the steps in reverse order to replace the cover.

【2】 ● Plug the power cord into the right side of the device and the other end into a power outlet → Fig. A

● Turn the power switch to the ON position → Fig. B

● The AC light on the front will turn green after 8 seconds → Fig. C

Fig. A




• Plug in the power cord.

Fig. B



• Turn the power switch ON.

Fig. C

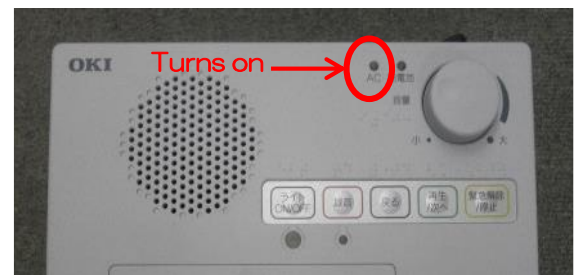


※If the battery light turns on, the power cord might not be connected properly. Please check the connection.

【3】 Installation

● Extend the antenna on the back of the device so that it can receive broadcasts.

※Place the device near a window with good visibility (where there is as little radio wave obstruction as possible).

Fully extend the rod antenna and position it upright

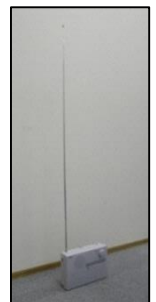

2. Operation

【1】Recording functions

● Automatic recording

- Emergency transmissions and district/town broadcasts are recorded automatically when received.

● Away-from-home recording

- To record broadcasts other than emergency transmissions and district/town broadcasts, use away-from-home recording.

※When a broadcast is received, the recording light will flash orange.

※If there are unplayed recordings, the orange light will continue flashing.



Away-from-home Recording

- Press the Record button during standby.
- You will hear a beep and the recording light will turn green. Recording is now possible.
- When a broadcast is received, the recording light will flash orange and green alternately.
- Recording time is limited to 40 minutes.
- If you press the Record button while away-from-home recording is set, you will hear a two beeps, the recording light will turn off, and away-from-home recording will be canceled.

● How to Play Recorded Content

Playback

- If you press Play /Next while the recording light is flashing, you will hear a beep and the latest broadcasts will be played in order.
- If you press Play /Next again after playing a broadcast, the latest broadcasts will be played in order.

Skip Forward

- Press [Play/Next] during playback. If there is another broadcast, you will hear a beep sound. If there is not, you will hear a boop sound.

Go Back


- Press [Back] within 2 seconds after the start. You will hear a two beeps.

Play from Start

- Press [Back] 3 seconds or more after the start. You will hear a beep sound.

Stop Playback

- Press [Emergency Release/Stop] during playback to return to standby mode. You will hear a boop sound.

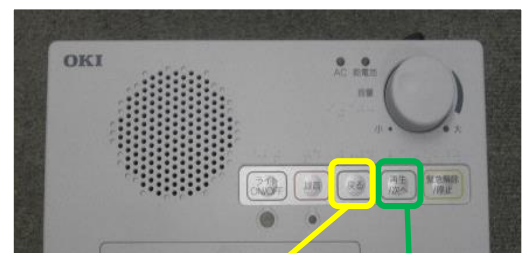

Back

Play/Next

【2】Volume adjustment

- Rotate the volume adjustment dial to the right to increase the volume.

- During emergency broadcasts, the volume will be set to maximum automatically.

Press Emergency Release/Stop and the volume will return to the regular level.



※“Emergency broadcasts” are reports sent the Fire and Disaster Management Agency, etc.